




iMFD Display Module DM-5 AIT

Version 1.1 November 7, 2007

***Please read the instructions completely through at least once before proceeding with the installation to minimize errors.**

Overview:

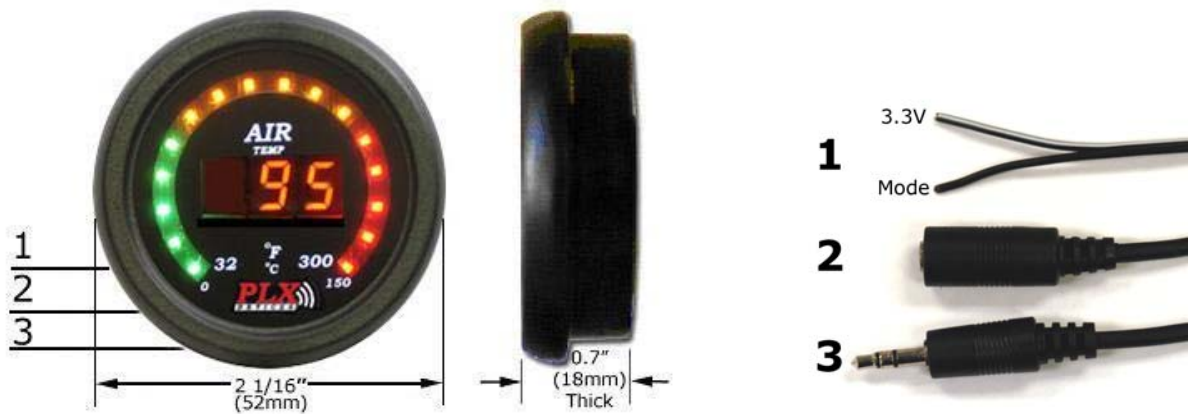


(Figure 1)

Three sets of wires come out of the DM-5 AIT

1. A pair of wires (black, and black with a white stripe)
 - a. Black connects to ground for Celsius reading, or left unconnected for Fahrenheit reading
 - b. Black/White Stripe connects to 3.3V power source on SM-AIT module
2. Female 3.5mm plug used for iMFD serial TX (Transmit)
3. Male 3.5mm plug used for iMFD serial RX (Receive)

Connecting Power:

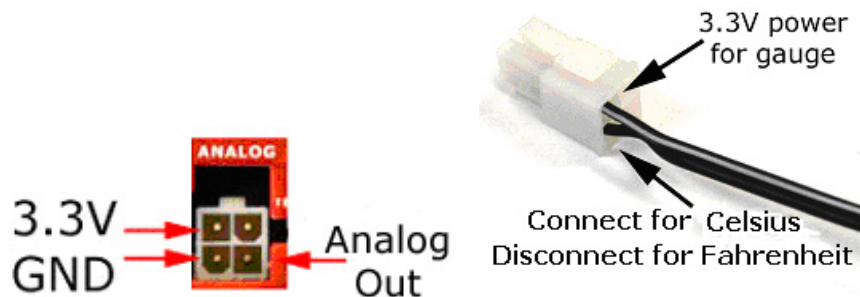

1. Use the included 4 pin connector and terminal to connect the Black/White Stripe wire to the "3.3V" location on your SM-AIT module. Solder or crimp the wire to the terminal to ensure good electrical continuity.
2. No connection to ground is necessary. Ground is automatically connected through the iMFD RX and TX connectors.
3. Power on the SM-AIT module and check if the DM-5 AIT lights up.


Version 1.1 November 7, 2007

www.plxdevices.com

(408)745-7591




Using the Sensor Module in the iMFD Chain:

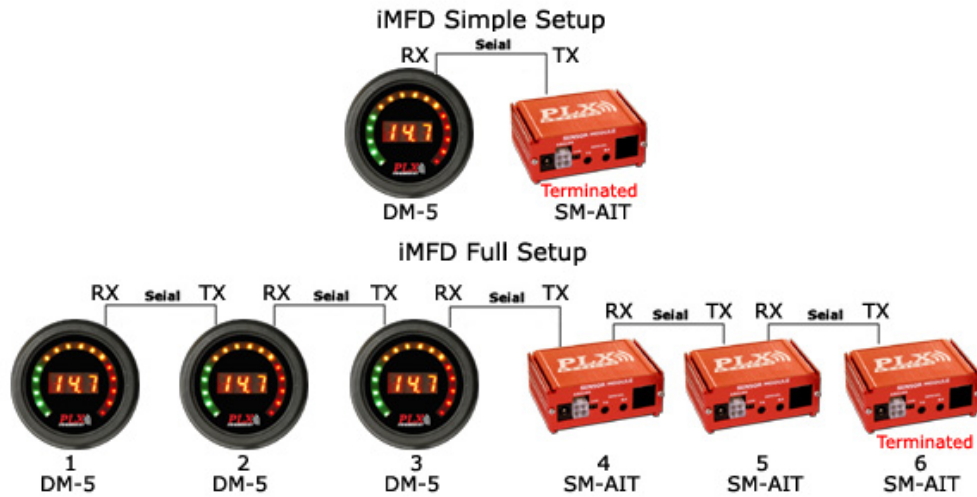

There are two recommended uses for the DM-5.

1. The simple setup connects to just one SM module. This is great for stand alone gauges. Connect the Male RX iMFD serial connector to the TX of the SM-AIT module
2. The complex setup is great for monitoring several SM modules simultaneously. Looking at the above diagram. The DM-5 AIT labeled (1) automatically displays the information from SM-AIT labeled (4). The DM-5 AIT labeled (2) automatically displays the information from SM-AIT labeled (5). The DM-5 AIT labeled (3) automatically displays the information from SM-AIT labeled (6) and so on.... The DM-5 automatically "knows" where to look for the information with respect to where it is connected in the iMFD chain.


**This setup is incorrect and violates the iMFD daisy chain rules.
Placing a display Module upstream from a Sensor Module is incorrect.
Placing a Sensor Module downstream from a Display Module is incorrect.**

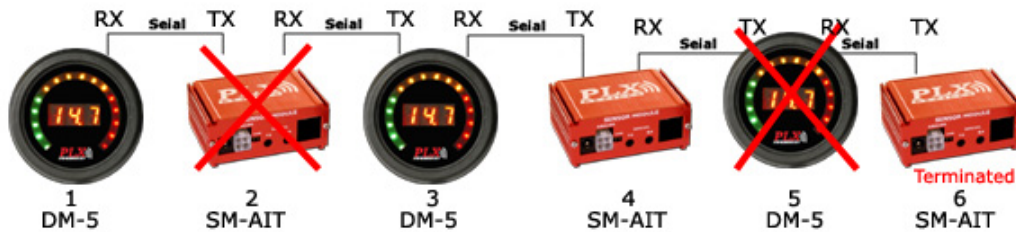

Setting the Gauge Mode:

The DM-5 AIT gauge has two modes of operation. Celsius or Fahrenheit can be displayed on the center 3 digit digital display.

1. Celsius
 - a. Connect the solid black wire to ground for Celsius mode. Ground is available on the SM-AIT.
2. Fahrenheit
 - a. Leave the solid black wire unconnected for Fahrenheit mode.

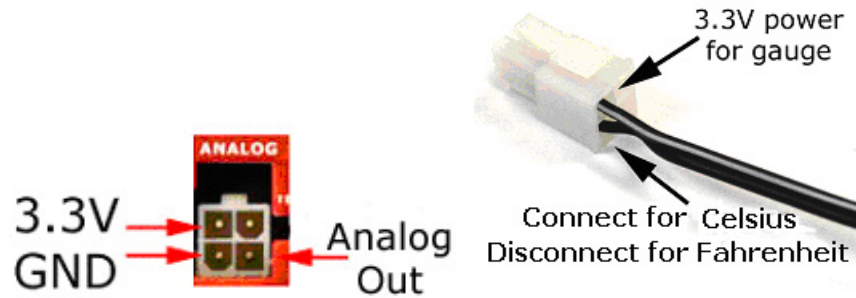

Troubleshooting:

1. Gauge does not power up.
 - a. Check 3.3V connection
 - b. Check iMFD serial chain connection. See above diagrams.
2. Gauge does not read correct value
 - a. Check iMFD serial chain connection. See above diagrams.
 - b. Check if your gauge is running Celsius mode or Fahrenheit mode.

Included Items:

1. DM-5 52mm Gauge
2. 4 pin connector (white) for SM-AIT connectivity
3. 2 terminals for 4 pin connector
4. Users guide

Specifications:

Physical Dimensions	Standard 2 1/16" (52mm) x 0.7" (18mm)
Display Technology	LED (3 Digit center, 16 Green, Yellow, Red Bars)
Viewing Angle	180 Degrees
Polarization	None (Viewable with polarization sunglasses)
Supply Voltage	3.3V from SM Module
Power Consumption	0.25 Watts Typical
Cable Length	6ft (~2m)
Operating Temperature	0 - 85 Deg C

TERMS OF USE

PLX Devices Inc. does not guarantee the SM-AIT functionality with any ECU, data logger or other devices that uses the output signals. Implementation and integration of the SM-AIT with any other device(s) must be done at your own risk. Improper installation and usage may lead to engine damage. Mount and install the SM-AIT in a location where it does not obstruct the driver's view and/or ability to safely control the vehicle.

LIMITED WARRANTY

PLX Devices Inc. warrants this product to be free from defects for 1 year from the date of purchase. If applicable, Oxygen sensors and other non-serviceable items are excluded from stated warranty. Serviceable goods must be determined by PLX Devices to be defective before any warranty or replacement is issued. PLX Devices' obligation under warranty shall be limited to repairing or replacing, under the discretion of PLX Devices, any part proven defective. This warranty is limited to the repair or replacement of parts in the manufactured good and the necessary labor done to affect its repair or replacement.

SERVICE UNDER WARRANTY

In the unlikely event that your PLX Devices hardware should fail during the warranty period, a Return Material Authorization number (RMA) must be first retrieved from PLX Devices Customer Support. Support can be contacted through email: support@plxdevices.com or by phone: 408-745-7591. All serviceable goods must be packaged securely with proof of purchase, RMA number, with all shipping charges prepaid and shipped to PLX Devices Inc. Goods returned under warranty must be received by PLX Devices Inc. within ten (10) business days after the RMA number has been issued. Goods received after this period is subject to fees for the service of repair or replacement. All repaired or replaced items shall be warranted for the remainder of the original product warranty.

RETURNS AND RESTOCKING FEE

A 15% restocking fee will apply to applicable PLX Devices products for refund. All returns are to be packed in original condition including packaging, documentation, manuals, and accessories. Returns that do not include all the accessories and components may be returned to the customer or charged on a per item basis. The customer assumes responsibility for product until receipt at PLX Devices Inc., shipping via an insurable carrier is recommended. Any unauthorized shipping charges will be billed to the customer or shipment will be refused.

DISCLAIMER

PLX Devices Inc. shall not be liable for direct, special, incidental, or consequential damages resulting from any legal theory including, but not limited to, lost profits, downtime, goodwill, damage, injury to persons, or replacement of equipment and property due to improper installation, integration and/or misuse of any PLX Devices Inc.'s product(s). This warranty applies to the original purchaser of product and is non-transferable. All implied warranties shall be limited in duration to the said 90 day warranty period.

Revision History

Version 1.0 (8/6/07)	Initial release
Version 1.1 (11/7/07)	Updated image for connection diagrams, updated warranty policy